

10 Steps To Achieve Optimal Ball Screw Selection

Executive Summary

Ball screw assemblies translate rotational motion to linear motion or vice versa. They are widely used to guide, support, locate and accurately move components and products in a wide range of automation applications, ranging from small laboratory fluid pumps to large overhead gantry systems. Specifying the right ball screw for a given application will ensure machine accuracy, repeatability and life while minimizing the total cost of ownership. This white paper provides an overview of ball screw assemblies and the factors that motion system designers must consider to ensure optimal application performance.



Ball Screw Basics

A ball screw assembly consists of a ball screw and a ball nut with recirculating balls. (Figure 1) The interface between the screw and the nut is made by balls that roll in matching forms in the ball screw and ball nut. The load on the ball screw is distributed over a large number of balls so that each ball is subjected to a relatively low load. Because of the rolling element design, ball screw assemblies have a very low coefficient of friction, which equates to high mechanical efficiency.

The key difference between ball screws and lead screws, which are also considered for comparable applications, is that ball screws use a recirculating ball bearing system to minimize friction and maximize efficiency. This makes ball screw assemblies more expensive than lead screw assemblies, but their ability to carry higher loads, achieve faster speeds and achieve predictable life makes them well worth their added cost for many applications. Also, because the ball screw assembly typically provides mechanical efficiency up to 95%, the higher cost is often offset by reduced power requirements. For end-users, the increased load capacity, longer life and predictable reliability of ball screws are advantages over lead screws.

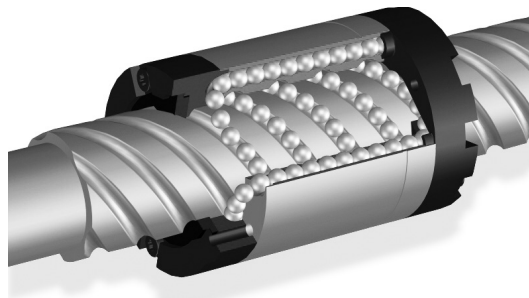


Figure 1. Ball Screws use recirculating balls to minimize friction, which provides up to 95% mechanical efficiency.

Selecting the right ball screw assembly for a specified load capacity and precision is an iterative process. It starts with determining the load to be moved, the required velocity, and the positioning accuracy and repeatability desired. From there you can calculate the diameter, lead and load capacity of the ball screw assembly to drive your application, and once you have that, you can refine the selection based on considerations of durability over the lifecycle, mounting configuration, and environmental conditions.

The following are 10 steps that will lead you to an optimal ball screw selection:

1. Establish load, velocity and operating time requirements.
2. Determine application life expectancy.
3. Determine accuracy requirements.
4. Determine repeatability requirements.
5. Assess mounting issues.
6. Determine whether you should be using the ball nut in tension or compression mode.
7. Consider vibration and harmonic challenges.
8. Explore other design possibilities.
9. Understand handling and maintenance requirements.
10. Take full advantage of online selection and configuration tools.

We explore each step on the next pages.

1. Establish load, velocity and operating time requirements

Although you may end up modifying the load or velocity specifications based on considerations of available component options, these are always application dependent.

Ball screws are available to handle high thrust loads upwards of 1500 kN of dynamic capacity using a Ø 160 mm ball screw assembly with efficiency typically up to 95%. They can achieve velocities up to 4500 RPM depending on the diameter.

2. Determine application life expectancy

Life expectancy should be defined based on the operational profile – how many hours per day, days per week and weeks per year the ball screw will be run – and the overall life requirement for the ball screw.

For more complex applications, you also have the option to build a complete motion profile. Each segment of the motion profile requires entry of the speed at the beginning of the segment, the speed at the end of the segment, the segment time and the load during the segment.

Calculate the assembly life using the dynamic load rating specified for each ball nut provided in Figure 2. All ball nuts with curves that pass through or are above the plotted point are suitable for the example. The suitable life expectancies shown in this graph are not to exceed the maximum static load capacity as given in the rating table for the individual ball nut assembly. Figure 2 shows the expected life according to diameter and load.

3. Determine accuracy requirements

Lead accuracy is the most common measure of ball screw accuracy. Lead refers to how far a non-rotating ball nut will travel with a single 360-degree turn of the screw. Lead accuracy is measured as the permissible travel variation (actual position vs. theoretical position) per foot, in a ball screw built on an inch scale or per 300 mm in a metric product.

Ball screws are available in two tolerance levels: transport (T-Grade) and positioning (P-Grade.) T-Grade is the lower level with precision typically ±52 µm/300 mm or higher, and designers specify it primarily for applications requiring simple translation of a load from one point to another. When applications require knowledge of the absolute position of a load at every point along the stroke without implementing external positioning assemblies (linear encoders, glass scales or similar), they specify the higher-precision P-Grade accuracy, which typically provides accuracy of ±23µm/300 mm or lower.

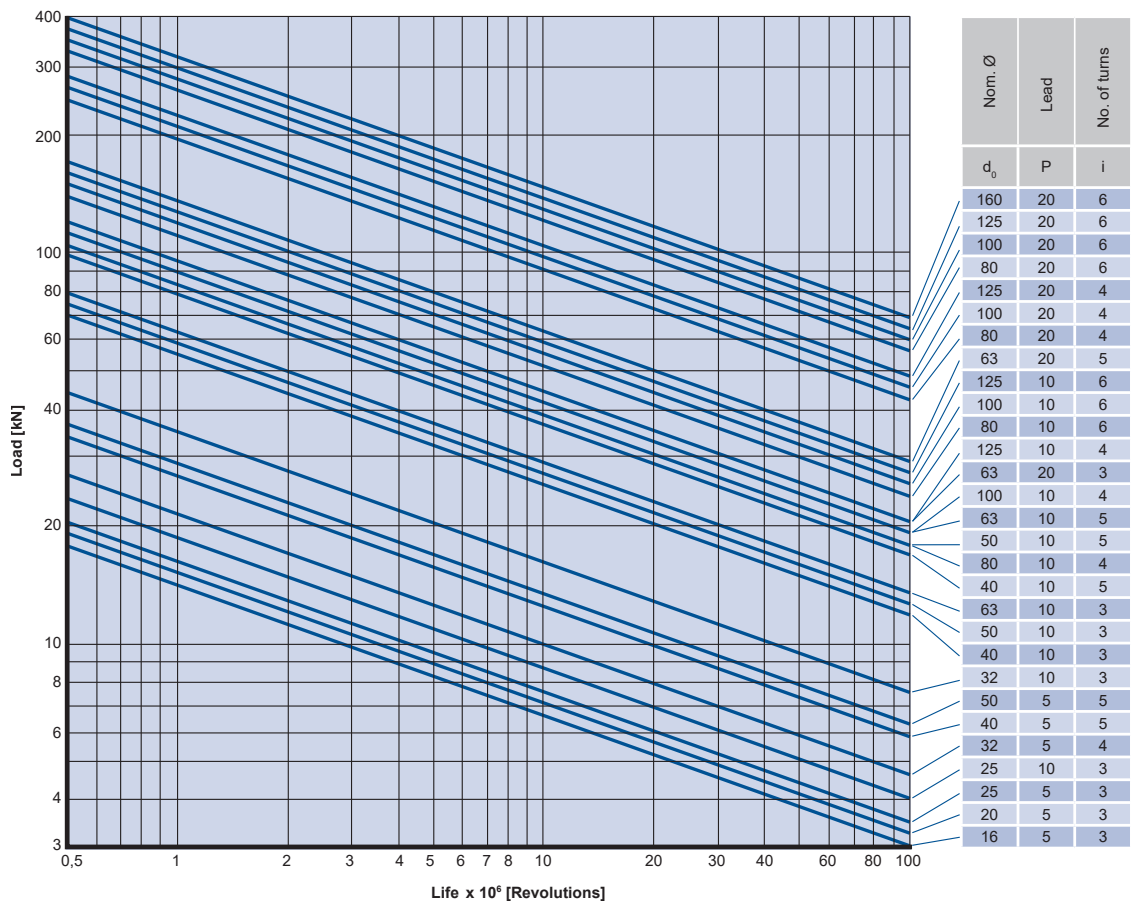


Figure 2. Assembly life expectancy.

The accuracy designation also defines the overall accumulation of positional error. Transport-grade error is cumulative and linear, whereas precision-grade error is controlled and constrained. Transport-grade ball screws tend to be less expensive than precision grade. Figure 3 compares transport- and precision-grade variations over the usable length of the ball screws.

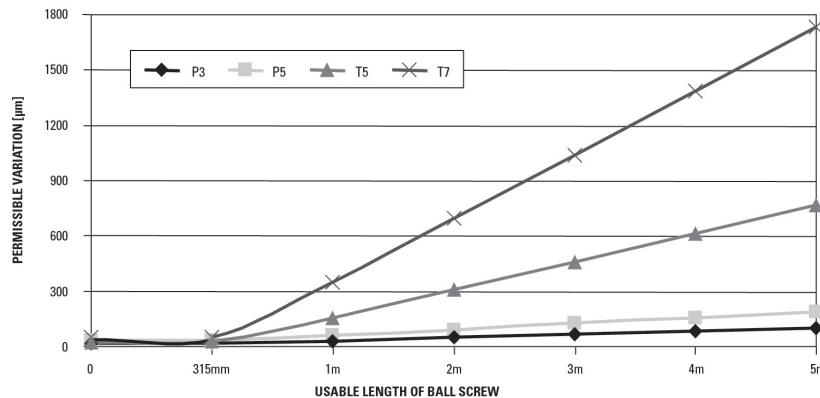


Figure 3. Permissible travel variation over usable length.

ball nut in the system and drive it 25 mm forward and back to the original position. The variation from zero is the backlash. Repeatability is the quantitative value of that variation, and ball screws are known for their low backlash and thus excellent repeatability.

4. Determine repeatability requirements

Where accuracy is the measure of how closely a system approaches a command position, repeatability is the measure of its ability to return to a designated location during operation. Impacting repeatability is the free movement between the nut and the screw, known as "backlash," which can be measured axially or radially.

Where no preload is used, axial play is present between the screw and nut, typically 0.06 to 0.2 mm depending on the size. Preload is typically not used for transport or vertical applications. A non-preloaded ball nut has internal clearances between components, meaning that backlash exists. A preloaded ball nut, however, has no axial clearance, which eliminates backlash and subsequently increases stiffness.

Ball screw backlash is largely a function of ball diameter and the manufacturing process of the nut and screw.

To measure axial backlash, secure the screw from movement and axially push and pull on the ball nut while measuring its movement with a dial indicator. Or, put a dial indicator on the

Preloading the nut can control backlash. With skip-lead preload, the lead is offset within the ball nut to provide a precise preload. This type of preload is typically used where both repeatability and high stiffness are needed. Double-nut adjustable preload involves the use of a compression spring to axially load two ball nuts against each other. It is typically used for positioning applications where repeatability is critical.

Preloading also increases the torque required to turn the nut on the screw and is measured by the percentage of preload to dynamic capacity. A ball nut with a dynamic capacity of 680 N and a preload rating of 10% has a 68 N internal preload. Although preloading a ball screw improves repeatability by removing backlash, it does not affect accuracy.

Preloading is available on all precision screw products. They cost more than non-preloaded assemblies due to complexity, additional machining, assembly and verification/measurement. Ball screw assemblies can be preloaded with double or single nut configurations. There are three major

types of preload – single nut oversized ball (4-point contact), single nut skip lead (2-point contact) and double-nut (2-point contact) (Figure 4). 4-point preload maintains the smallest package size while maintaining full load capacity. Skip lead ball nuts have

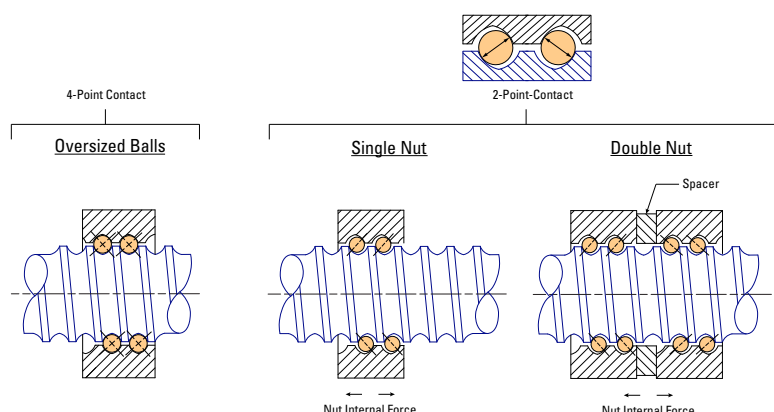


Figure 4: Three main preload types with 2-Point Contact and 4-Point Contact.

half the capacity of similar-sized single nuts as only half the ball bearings are loaded in each direction. Double-nut preload assemblies have the same load capacity as a internal preloaded single-nut because only one ball nut is loaded in each direction.

As illustrated in Table 1, balls screws produced by rolling and with standard preloading can be specified for static loads of up to 400 kN, dynamic loads of up to 130 kN, lengths of 8 m and diameter up to 80 mm for precision classes up to P3. Larger diameters and also higher-precision class applications will typically require whirled or ground shafts.

5. Assess mounting issues

The amount of mounting flexibility can have a significant impact on the available ball screw options. The configuration of the end support and travel distance will dictate the load and speed limitations of the ball screw. Ball screws are mounted in either supported or fixed configurations. A supported end holds the ball screw at one focal point and does not resist bending moments. A supported end is generally easier to align and install than a fixed one, so installation costs are typically lower. A fixed end resists bending moment loads because it is typically based on two bearings spaced sufficiently so the ball screw remains perpendicular to the planes of the rotary bearings. The fixed offers great column strength and higher critical speed.

Figure 5 illustrates four fixity options. The assembly can be fixed at both ends, fixed at only one end and supported on the other, supported at both ends, or fixed at one end and free at the other.

The assembly should also be properly aligned with the drive system, bearing supports and load to achieve optimal performance and life.

Geometric orientation is another key selection factor. With a horizontal orientation, the load equals the payload weight multiplied by the frictional coefficient. With a vertical orientation, the load equals

	Rolled	Whirled/Ground
Static Load	Up to 400 kN	Up to 6000 kN
Dynamic Load	Up to 130 kN	Up to 1500 kN
Length	Up to 8 m in one piece	Up to 16 m in one piece
Precision Class	Up to P3	Up to P3/P1
Preload Level	Standard	Up to 10%
Diameter	Up to 80 mm	Up to 160 mm

Table 1. Load handling capabilities by ball screw production type.

the weight. The positional requirements determine which grade of ball screw is suitable for the application.

6. Determine whether you should be using the ball nut in tension or compression mode

Tensile loads stretch the screw axially, which can elongate and potentially crack the screw. Compression loads put axial pressure on the screw and can make it bow out. A ball screw in tension can handle loads up to the rated capacity of the nut, so when using a ball nut in tension mode, simply check the rated capacity of the nut.

For a ball nut in compression, use the compression loading chart in Figure 6 to select a ball screw diameter that meets or exceeds the design load. All screws with curves that pass through or above and to the right of the plotted point are suitable for the example. The suitable compression loads shown in this graph are to not exceed the maximum static load capacity as given in the rating table for the individual ball nut assembly.

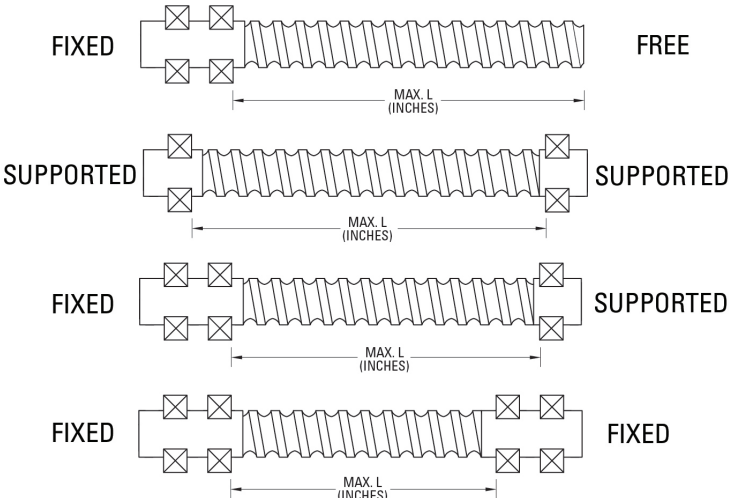


Figure 5. End fixity factors.

Either calculate the permissible compression loading of the nut or consult a compression loading chart supplied by the manufacturer to select the ball screw diameter that meets or exceeds your required load.

Ball screws work best with axial loads only. The screw must carry an axial load that is

equal and opposite to the load generated on the ball nut by the motor's torque. The ability of ball screws to avoid buckling under a compressive load is called column strength, which is characterized by the ratio of the length to the diameter, making compression load dependent upon column strength.

7. Consider vibration and harmonic challenges

The limiting speed of a ball screw is usually its tendency to vibrate based on its natural frequency. The critical speed is the rotary speed that sets up harmonic vibrations in the ball screw. Critical screw speed is dependent upon the screw's

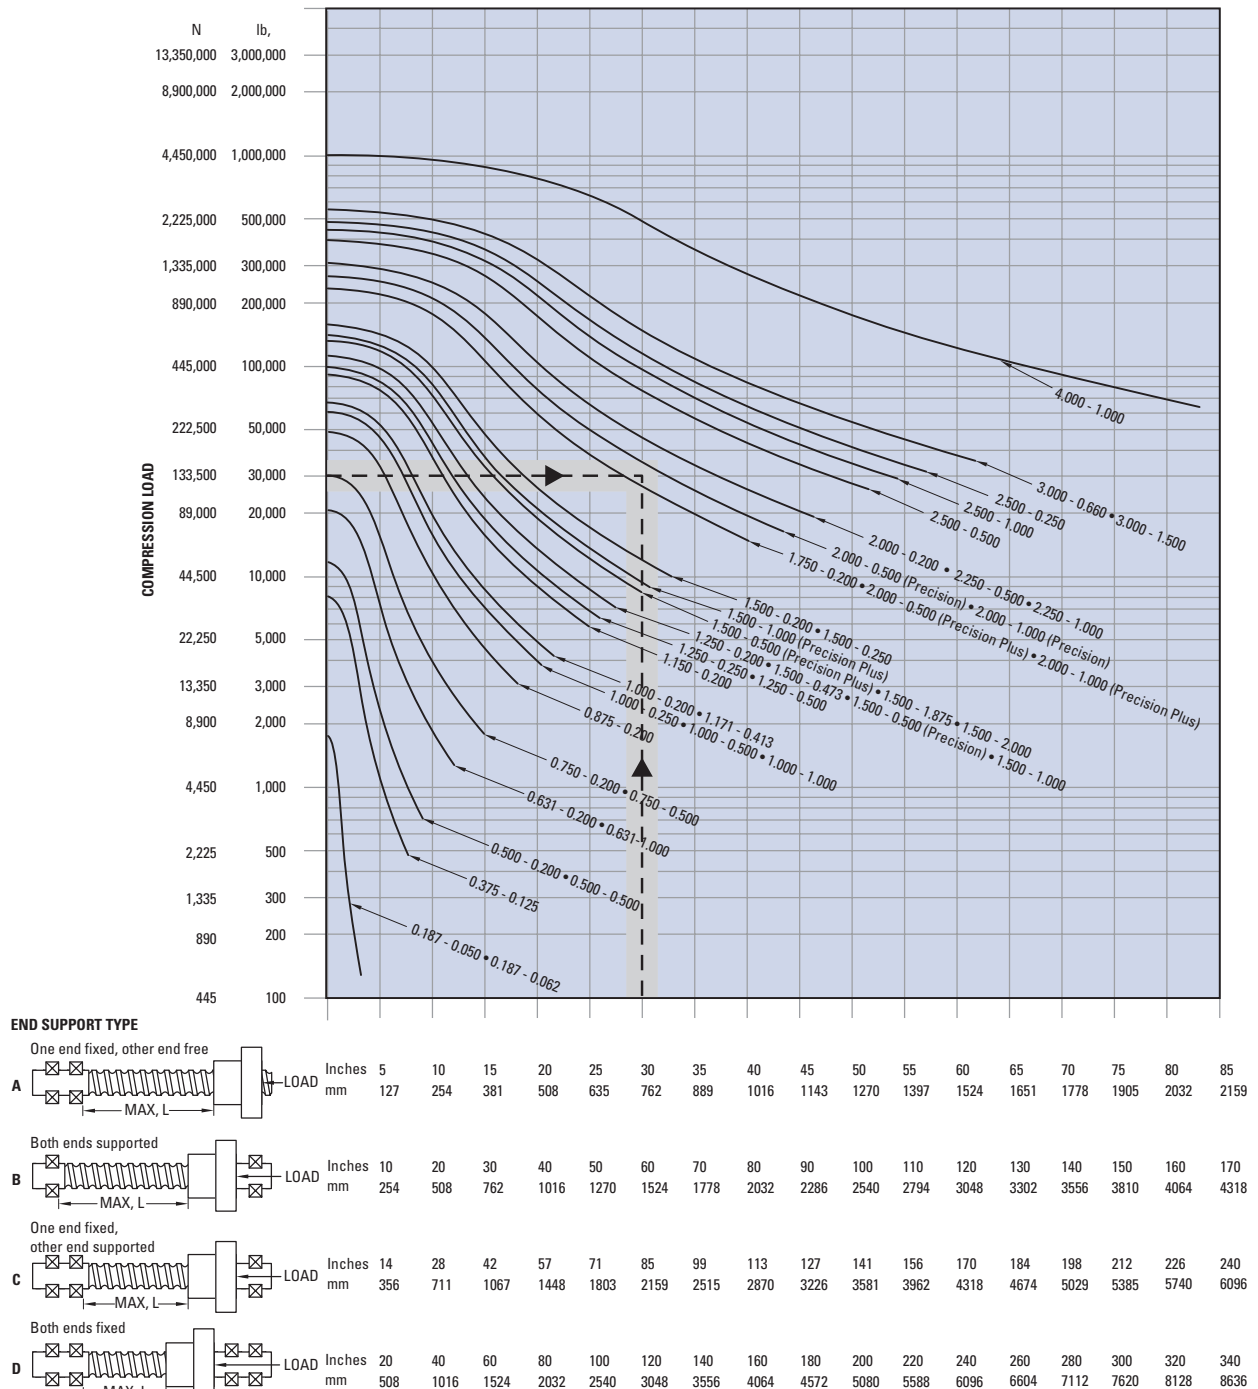


Figure 6. Compression Load and Length Calculations.

root diameter, unsupported length and the end support configuration. For example, a 2500 mm-long, 25 mm-root-diameter ball screw with both ends fixed has a natural frequency of about 18 Hz. With both ends supported rather than fixed, the natural frequency of the same ball screw is reduced to about 8 Hz. If the rotational frequency of the screw matches the screw’s natural frequency, slight imbalances in

the screw can resonate. Excessive bending and bowing then keep the screw from working properly. Figure 7 shows the acceptable speed versus length for ball screws. All screws with curves that pass through or above and to the right of the plotted point are suitable for the example. The four end-fixity drawings on the bottom of the figure show the bearing configurations for supporting

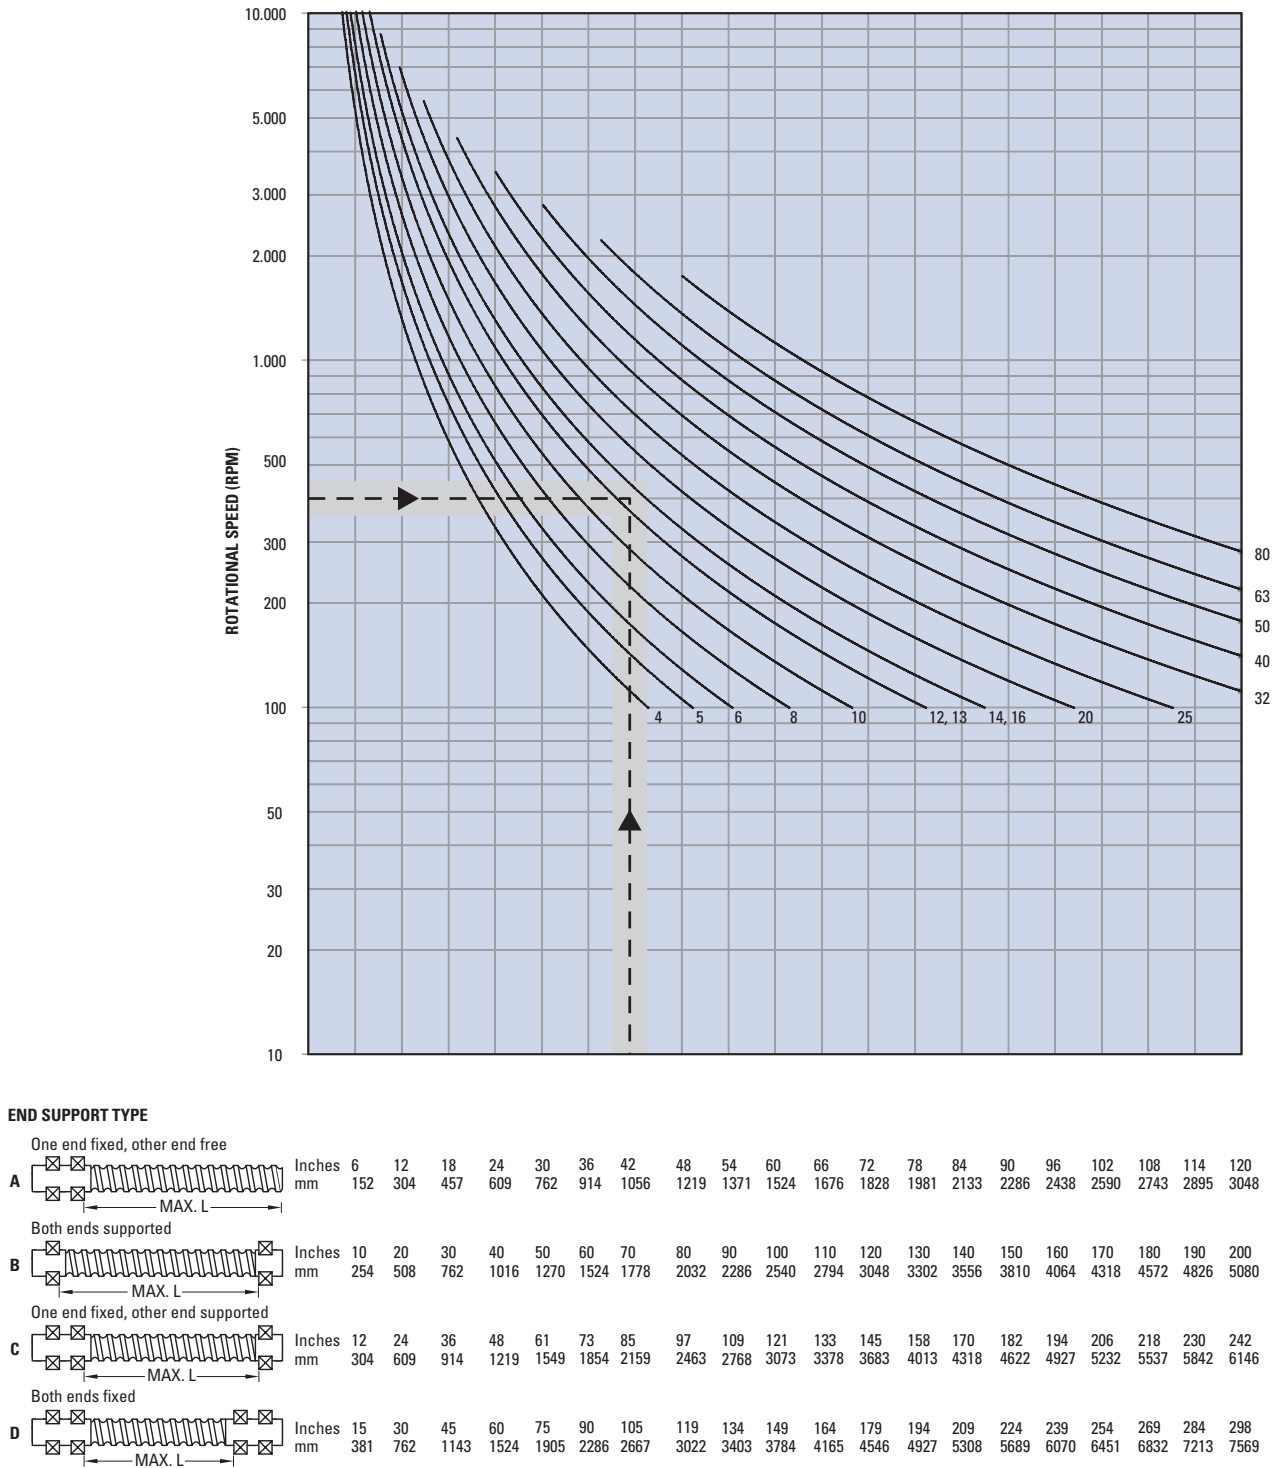


Figure 7. Acceptable Speed vs. Length.

a rotating shaft, and the chart shows the effect of these conditions on critical shaft speed for the unsupported screw length. The acceptable velocities shown by this graph apply to the screw shaft selected and are not indicative of the velocities attainable of all of the associated ball nut assemblies.

If the load, life and speed calculations confirm that the selected ball screw assembly meets or exceeds the design requirements, then proceed to the next step. If not, larger diameter screws will increase the load capacity and increase the speed rating. Smaller leads will decrease the linear speed (assuming constant input motor speed), increase the motor speed (assuming constant linear speed), and decrease the input torque required. Higher leads will increase the linear speed, assuming constant input motor speed; decrease the input motor speed, assuming constant linear speed; and increase the input torque required.

Calculate the lead of the ball screw that will produce the speed requirement based on the following formula:

$$\text{Lead (mm)} = \frac{\text{Travel Rate (mm/min.)}}{\text{rpm}}$$

Remember that every ball screw has its own rotation speed limit – the point of excessive vibration/ harmonics in the screw. This critical speed is dependent upon the end support configuration. (Figure 5) Be sure to use the manufacturer's acceptable speed chart to help determine the critical speed of a particular ball screw system.

8. Explore other design possibilities

Other factors to consider in ball screw selection are the ball return systems, applications interface and environmental conditions.

Ball return system choices impact cost, installation, noise and other application-specific factors depending upon the application. Common return types include:

- *Internal button return systems*, which are typically used on low lead screws, are compact with no external radial protrusions to complicate mounting, and offer less noise and vibration than external returns.
- *Internal button return systems*, which are often used in 4-point contact, single nut and preload assemblies.
- *Internal end cap returns*, which are typically used on high lead screws, are compact with no external radial protrusions to complicate mounting. Their noise and

vibration are also low compared to external returns.

- *External return tubes*, which are typically used in inch screws, are cost effective and easy to install, maintain and repair.

In a typical application interface, a ball nut flange attaches the ball nut to the load. Threaded and cylindrical ball nuts provide a common alternative, but many other options exist. Bearing supports and custom end machining are available for most configurations to achieve application interface requirements.

Environmental conditions are another factor that could impact ball screw selection. Some units provide standard wiper kits that protect the assembly from contaminants and contain lubrication. Many options are available for materials and coatings that withstand different environmental conditions.

9. Understand handling and maintenance requirements

Ball screws must be handled carefully prior to proper installation. Shocks to the ball bearings can damage the bearing races through brinelling or cracking. High loads or flexing of the screw can lead to bending. Keep the assembly packaged and lubricated and stored in a clean, dry area because debris and contamination can jam recirculation tracks, and high humidity or rain can cause corrosion.

Proper lubrication is vital to ball screw performance and life. Lubricants maintain the low friction advantage of ball screw assemblies over other motion control technologies by minimizing the rolling resistance between balls and grooves, and sliding friction between adjacent balls. Lubricants are often taken for granted but the right choice for each application ensures a ball screw that will perform properly for its calculated life.

Oil can be applied at a controlled flow rate directly to the point of need, and it will clean out contaminants as it runs through the ball nut. It can also provide cooling.

Grease is less expensive and requires less frequent application than oil, and it does not contaminate process fluids. On the other hand, grease is hard to keep inside the ball nut and tends to build up at the ends of ball nut travel, where chips and abrasive particles can accumulate. Incompatibility of old grease with re-lubrication grease can also create problems, so checking compatibility carefully is critical. A load-carrying grease can help extend the life of an assembly, but the overall load rating will not change.

Noise is a related consideration for some applications. Larger ball screws utilize larger balls and are therefore inherently noisier. External return systems are also inherently noisier than internal return systems. The use of spacer balls can reduce the noise of a ball nut but reduces the load capacity. The selection and proper application of grease can also reduce the overall noise level. Minimizing or even eliminating backlash can also reduce noise in an assembly.

Maintenance teams should inspect ball screws periodically to avoid downtime and maximize life. Performing the following checks will help you spot indicators of trouble:

- Check for metal fragments that may cause damage and could be an indication of broken balls or component wear.
- Measure lash to verify component wear.
- Check the races for wear, spalling, brinelling and contamination.
- Check to make sure the screw is lubricated and free of contamination and corrosion.
- Check that all connections are tight and that there are no vibration issues.
- Check the drive system to make sure that the drive torque is constant, and the ball screw is operating smoothly and quietly.
- Noise levels should be the same as on the first day of operation. The ball nut travel should be smooth and regular. Any change in noise level or “feel” is an indication of internal damage.

10. Take full advantage of online sizing and selection tools

Web-based sizing and selection tools represent an increasingly popular approach to simplifying the machine design process. Such resources can significantly reduce the time required to identify optimum standard components that meet the vast majority of application requirements. A popular example is the Ball Screw Selector Tool (www.thomsonlinear.com/en/products/ball-screws-products) from Thomson Industries. Using an intuitive layout and visual selection process, the ball screw search is narrowed immediately for users. Real-time adjustments are reflected per defined filter parameters, and results include up-front lead times and pricing, links to 3D models, catalog links and product details, and the option to purchase instantly.

Conclusion

Ball screws provide an excellent method for translating rotational motion to linear motion for many applications, including those where high loads and close tolerances are involved. To apply the correct type of ball screw in a particular application, the design engineer must consider the advantages and capabilities of each. Selecting the right technology can reduce design complexity, improve performance and reduce the overall cost of the assembly.

Thomson Industries, Inc. is manufacturing linear motion components and offers a full selection of precision ball screws to match the requirements of various applications.

Visit www.thomsonlinear.com/bs to find your optimal solution.

EUROPE

United Kingdom

Thomson
Office 9, The Barns
Caddesdown Business Park
Bideford, Devon, EX39 3BT
Phone: +44 1271 334 500
E-mail: sales.uk@thomsonlinear.com

Germany

Thomson
Nürtinger Straße 70
72649 Wolfschlugen
Phone: +49 7022 504 403
Fax: +49 7022 504 405
E-mail: sales.germany@thomsonlinear.com

France

Thomson
Phone: +33 243 50 03 30
Fax: +33 243 50 03 39
E-mail: sales.france@thomsonlinear.com

Italy

Thomson
Via per Cinisello 95/97
20834 Nova Milanese (MB)
Phone: +39 0362 366406
Fax: +39 0362 276790
E-mail: sales.italy@thomsonlinear.com

Spain

Thomson
E-mail: sales.esm@thomsonlinear.com

Sweden

Thomson
Estridsväg 10
29109 Kristianstad
Phone: +46 44 590 2400
Fax: +46 44 590 2585
E-mail: sales.scandinavia@thomsonlinear.com

SOUTH AMERICA

Brasil

Thomson
Av. João Paulo Ables, 2970
Jardim da Glória - Cotia SP - CEP: 06711-250
Phone: +55 11 4615 6300
E-mail: sales.brasil@thomsonlinear.com

USA, CANADA and MEXICO

Thomson
203A West Rock Road
Radford, VA 24141, USA
Phone: +1 540 633 3549
Fax: 1 540 633 0294
E-mail: thomson@thomsonlinear.com
Literature: literature.thomsonlinear.com

ASIA

Asia Pacific

Thomson
E-mail: sales.apac@thomsonlinear.com

China

Thomson
Rm 805, Scitech Tower
22 Jianguomen Wai Street
Beijing 100004
Phone: +86 400 606 1805
Fax: +86 10 6515 0263
E-mail: sales.china@thomsonlinear.com

India

Thomson
c/o Portescap India Pvt. Ltd.
Office no. 103, 4TH floor,
Arena House, Road no.12,
Marol Industrial Area, Andheri East,
Mumbai Suburban, Maharashtra, 400093
E-mail: sales.india@thomsonlinear.com

Japan

Thomson
Minami-Kaneden 2-12-23, Suita
Osaka 564-0044 Japan
Phone: +81 6 6386 8001
Fax: +81 6 6386 5022
E-mail: csjapan@scgap.com

South Korea

Thomson
3033 ASEM Tower (Samsung-dong)
517 Yeongdong-daero
Gangnam-gu, Seoul, South Korea (06164)
Phone: + 82 2 6001 3223 & 3244
E-mail: sales.korea@thomsonlinear.com